

THE ECLIPSETM

ASSEMBLY INSTRUCTIONS

Sun shade must be removed from trampoline in high winds.



ASSEMBLY VIDEO



ASSEMBLY INSTRUCTIONS

THE ECLIPSE™

STEP 1



Unfold and layout TheEclipse™ sun shade, placing the rods into two even piles next to an entry point. *Note: Sunscreen should still be applied even while using TheEclipse™ sun shade.*

STEP 2




Begin feeding the fibreglass rods through an entry point, connecting another rod as you go. Repeat until you have used half the total amount of rods. *Tip: Begin with the non-silver end first, as it will feed through the sleeve with less resistance.*

STEP 3



Take the remaining rods to the opposite entry point & feed the second half of the rods until none remain. Connect each half at either entry point, completing a full circle. Place inside the trampoline, by lifting over the netting.

STEP 4

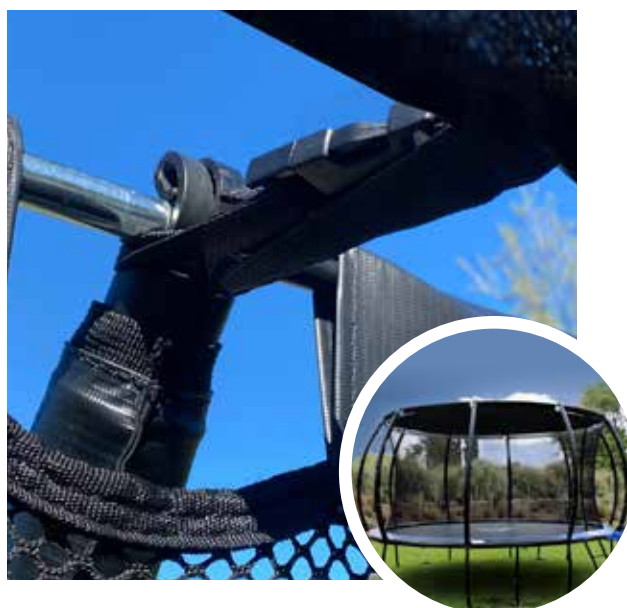

Connect the sunshade at each net pole by wrapping the strap around the pole cap, just underneath the fibreglass rod. Tighten each strap until the sun shade is pulled tight. TheEclipse™ is now complete!